

 
# **///POLO**

## **A P P L I A N C E S**

### **Ceramic Hob**

**Instruction Manual / Installation Manual**

**MODEL: BCH302-2**

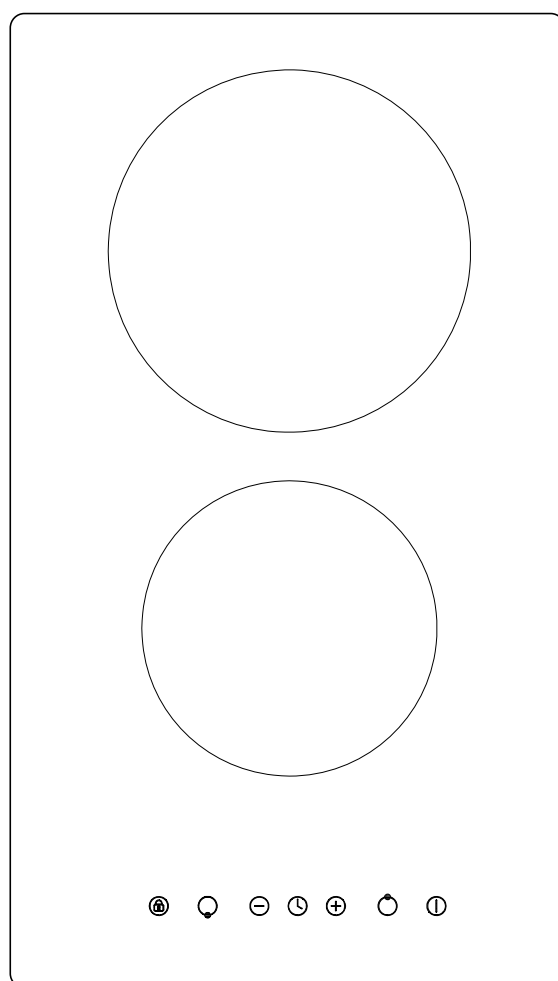



## Warning

- 1) The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. children being supervised not to play with the appliance.
- 2) WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for hob surfaces of glass-ceramic or similar material which protect live parts.
- 3) WARNING: a steam cleaner is not be used.
- 4) That the appliance is not intended to be operated by means of external timer or separated remote-control system.
- 5) Danger of fire: Do not store items on the cooking surfaces.
- 6) CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- 7) WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire.
- 8) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 9) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. children shall not play with the appliance. cleaning and user maintenance shall not be made by children without supervision.
- 10) WARNING: The appliance and its accessible parts become hot during use.
- 11) Care should be taken to avoid touching heating elements.
- 12) Children less than 8 years of age shall be kept away unless continuously supervised.

## Warning

- 13) WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- 14) NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- 15) CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- 16) WARNING: Danger of fire: do not store items on the cooking surfaces.
- 17) WARNING: Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- 18) Power cord can't be accessible after installation.

## DEAR CUSTOMER

---

The cooker is exceptionally easy to use and extremely efficient. After reading the instruction manual operating the cooker will be easy

Before being packaged and leaving the manufacturer, the cooker was thoroughly checked with regard to safety and functionality

Before using the appliance, please read the instruction manual carefully. By following these instructions carefully you will be able to avoid any problems in using the appliance.

It is important to keep the instruction manual and store it in a safe place so that it can be consulted at any time.

It is necessary to follow the instructions in the manual carefully in order to avoid possible accidents.

### Caution!

Do not use the cooker until you have read this instruction manual.

The cooker is intended for household use only.

The manufacturer reserves the right to introduce changes which do not affect the operation of the appliance.

## TABLE OF CONTENTS

---

SAFETY INSTRUCTIONS.....	3
HOW TO SAVE ENERGY.....	5
PRODUCT DESCRIPTION.....	6
INSTALLATION.....	8
OPERATION.....	9
MAINTENACE & TROUBLESHOOTING.....	11

# SAFETY INSTRUCTIONS

---

Ensure there is a grounded socket nearby(behind the unit)

A dedicated power circuit is recommended for the unit but not required.

Additional electrical appliances on the same circuit may exceed the current(amperage) rating for that circuit.If after the installation of your unit.the circuit breaker trips or the fuse fails on a repeated basis,then a dedicated circuit will likely be required.

The appliance must be installed only by a qualified person in compliance with the instructions provided.Incorrect installation may cause harm to persons,animals or may damage property.

The manufacturer declines all responsibility for improper installation which may harm persons and animals and damage property.

The power supply to the appliance must be cut off before any adjustments or maintenance work is done on it.

Your electric heat stove is a classified electrical appliance.As with any electrical appliance and particularly with electric heaters,basic precautions must be followed in order to reduce the risk of fire, burns, electrical shocks or other serious injuries or death.

The appliance becomes hot during operation.Take care not to touch the hot parts the electric heat stove.

Always keep children away from the cooker.While in operation direct contact with the cooker may cause burns!

Ensure that small items of household equipment,including connection leads,do not touch the hot electric heat stove or the hob as the insulation material of this equipment is usually not resistant to high temperatures.

Do not leave the cooker unattended when frying.Oils and fats may catch fire due to overheating or boiling over.

Do not use the cooker in the event of a technical fault.. Any faults must be fixed by an appropriately qualified and authorised person.

In the event of any incident caused by a technical fault, disconnect the power

and report the fault to the service center to be repaired.

The rules and provisions contained in this instruction manual should be strictly observed. Do not allow anybody who is not familiar with the contents of this instruction manual to operate the cooker.

Cabinets with a veneer exterior must be assembled with glues which can withstand temperature of up to 100°C.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Use this electric heat stove only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.



## HOW TO SAVE ENERGY



Using energy in a responsible way not only saves money but also helps the environment. So let's save energy! And this is how you can do it:

Do not install the cooker in the direct vicinity of refrigerators / freezers. Otherwise energy consumption increases unnecessarily.

## DISPOSAL OF THE APPLIANCE



Old appliances should not simply be disposed of with normal household waste, but should be delivered to a collection and recycling center for electric and electronic equipment. A symbol shown on the product, the instruction manual or the packaging shows that it is suitable for recycling.

Materials used inside the appliance are recyclable and are labelled with information concerning this. By recycling materials or other parts from used devices you are making a significant contribution to the protection of our environment.

Information on appropriate disposal centers for used devices can be provided by your local authority.

## UNPACKING



During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment.

 
All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

### Caution!


During unpacking, the packaging materials ( polythene bags, polystyrene pieces, etc. ) should be kept out of reach of children.

# PRODUCT DESCRIPTION

## Top View

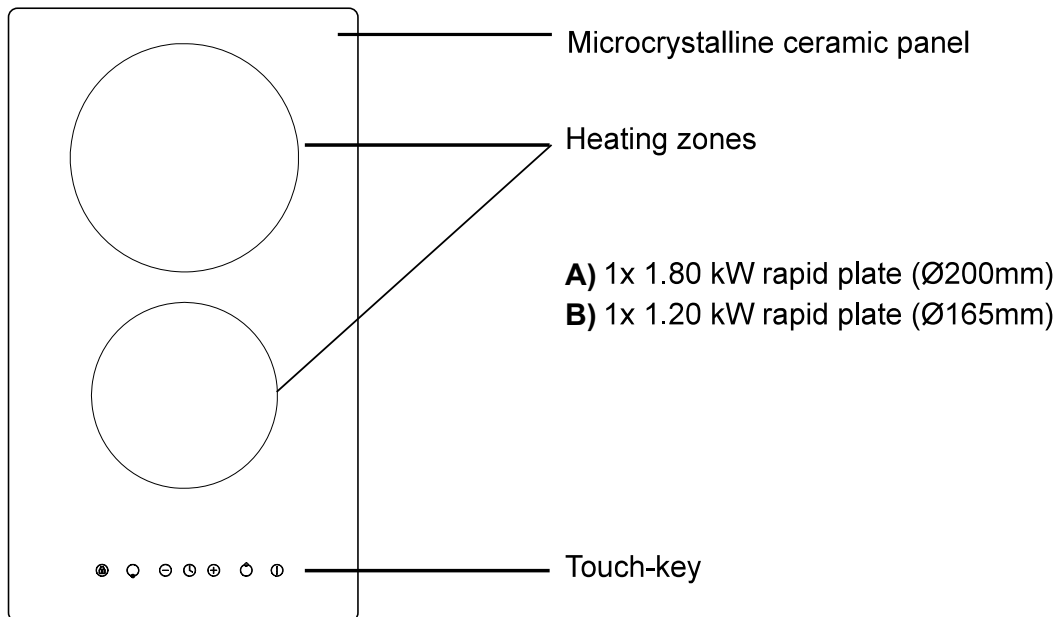


## Control Panel

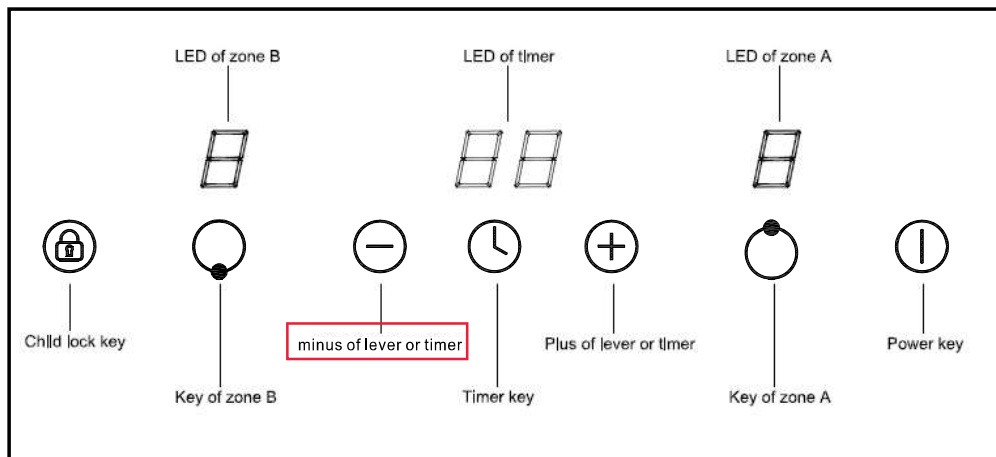 

## PRODUCT DESCRIPTION

 ---

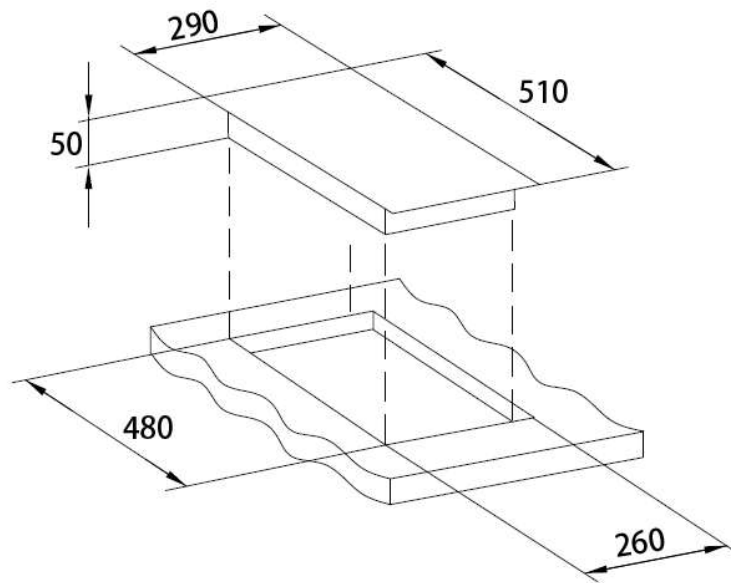

### Product dimensions:

Depth: 510mm  
Width: 290mm  
Height: 50mm

### Aperture dimensions:

Depth: 480mm  
Width: 260mm

### Product specifications:

 
- 1x 1.80 kW rapid plate (Ø200mm)
- 1x 1.20 kW rapid plate (Ø165mm)

### Electrical details

Rated Voltage: 220-240Vac, 50/60Hz  
Supply Connection: 13A (double pole switched fused outlet with 3mm contact gap)  
Max Rated Inputs: 3.00kW  
Mains Supply Lead: 3 core x 1.5m<sup>2</sup>

# INSTALLATION

---

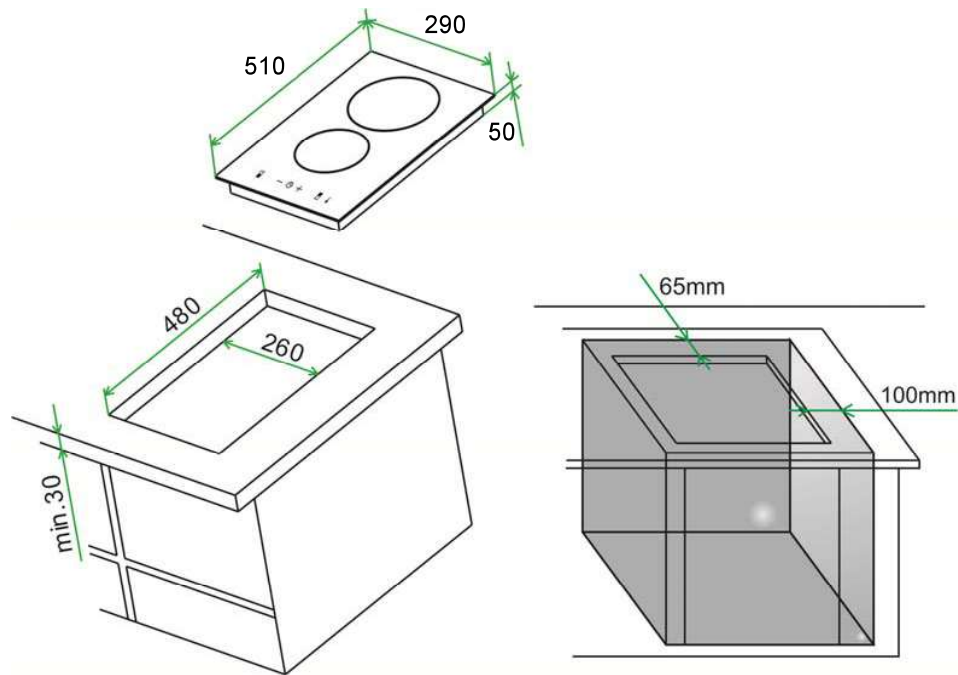

## Important:

There must be a minimum distance of 100 mm between the edges of the cut hole in the bench top and the adjoining cabinet walls and 65mm from rear wall of cabinet .

## Preparation

- Remove any dust from the benchtop directly surrounding the cut hole to ensure there is a clean surface.
- Remove the protective paper film from the adhesive strip that is secured to the bottom of the glass surface.
- Position the cooktop into the hole in the benchtop and press down firmly to ensure a secure fit to the benchtop.

 
# OPERATION

## Choice of cookware


Choose a pan with a diameter that is at least as large as the heating zone. For roasting tins there is a special widened heating zone of 140x250. Do not use pans with a concave or convex base.

Always remember to put a proper cover on the pan. We recommend the use of pans with thick, even bases.



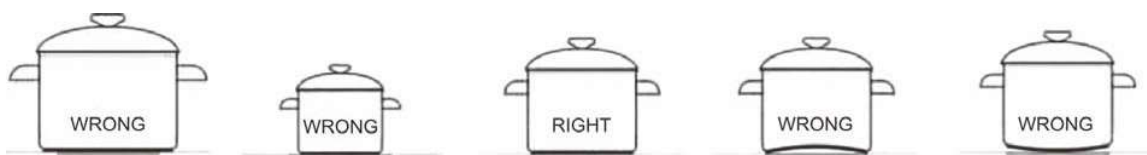

 
If the heating zones and pans are solied it is impossible to make full use of the heat.

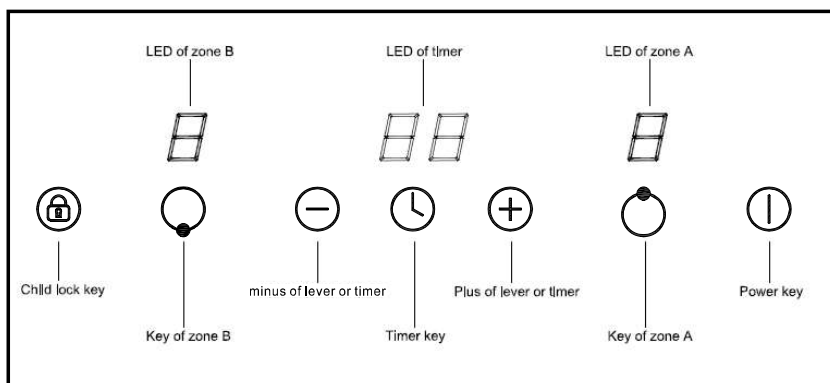

## Heat level selection



Display	Description	Explanation
	Control key for corresponding heating element	By pressing any of the 2 Control Keys, the corresponding hotplate is selected for operation. The respective LED Display for that hotplate will flash for 6 Seconds on setting 9(continues operation) and hotplate will activate after display stops flashing. Pressing corresponding Control Key twice in succession will terminate hotplate operation.

 
 
 
	Plus and minus key of Hot plate level or timer	In conjunction with the Control Keys and within the 6 seconds LED flash period, a chosen hotplate heating level will increase from setting 0 to 9 by pressing - or + selector key. When it is timer, it's will increase or reduce.
	Residual heat indicator	With the hotplate operation terminated, this symbol will show in the LED Display for the corresponding hotplate when this area is still hot and will disappear when area has cooled down enough to touch.
	Timer	A chosen hot plate with the LED lighting, the press the Timer key, the Timer of LED for this plate will be twinkle. By pressing - or + , time will be changed.
	Child Lock Key	Press the Child Lock Key for 3 Seconds to deactivate the Child Lock and allow the use of the Control Keys to operate hotplates.
	Power ON/OFF key	After connect to the power,,press the key,the hob is ready,you can select the zone on that you want. Press the key while the hob is working at any time,the hob will be off immediately.

## MAINTENANCE&TROUBLESHOOTING

### Caution!

Before maintenance or cleaning is carried out, the range machine should be disconnected from the main power supply. Ensure that the range machine is switched off at the wall socket and the plug removed.

- 1.Spills and splashes will not harden and stick to the glass, as it hardly heats up.
- 2.Micro crystal board surrounding should maintain clean, if have leakage to it as soon as possible please clean.
- 3.Slight stains can be removed with kitchen paper or cloth.
- 4.More resistant stains will need specific product for vitro-ceramic glass.  
Follow each product's inductions.

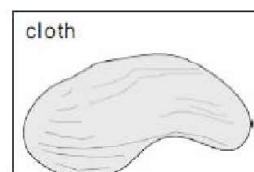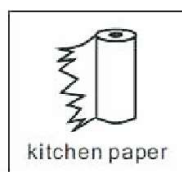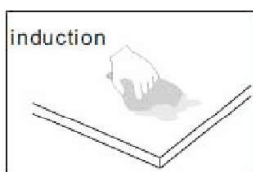

### Important!

- 1.Do not use abrasive products or cleaning powders as these could scratch the hob.
- 2.Do not use a steam cleaner.
- 3.If any cracks should appear on the surface of the glass, unplug he appliance immediately.
- 4.Do not use any part of the hob until a new vitro-ceramic glass has been installed.

Problem	Check and eliminate
Switch on the power, knobs or buttons transferred to work a state, hot dish doesn't work.	1.The power cord is connected. 2.Switches, sockets, fuse, the power is in good condition.
Use process stopped suddenly heating	Heating plate safety protection, wait a few minutes again electrify use.

A few small fault can follow the above table gate, contrasting checking whether the problems can be solved quickly.

if contrasting checking fault diagnosis and treatment table, oven still can not run normally, please contact manufacturer authorized after-sales service.

Please don't themselves freely remove repair, lest produce risk or to machine damage.