



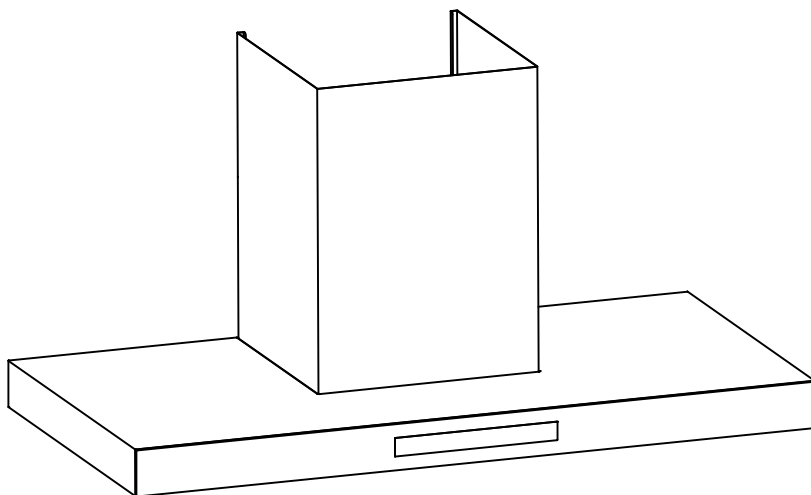


USER MANUAL

Model: TT0860
TT0890

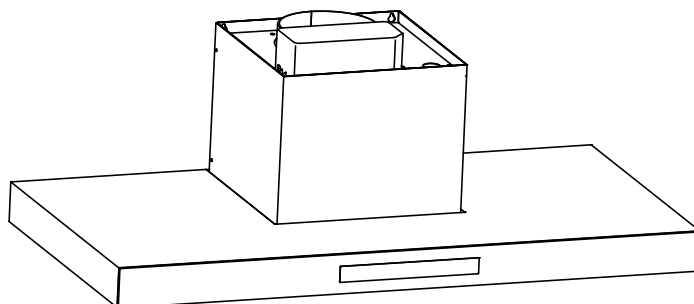




 [01] x 1




[04] x 1

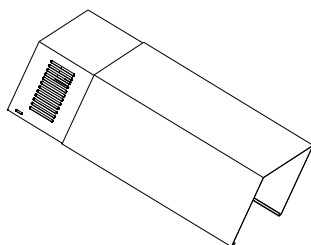


[02] x 1 (Optional)



 [05] x 2



[03] x 4

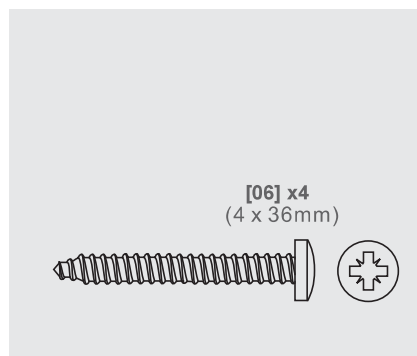

Cooker hood

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting **started...**

Safety
Before you start

03
04
08



In more **detail...**

Product functions
Switching on/off
Troubleshooting
Wiring
Technical and legal information

10
10
11
14
15



Appendix

Installation

16

Safety

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☒ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☒ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance.
- ☒ The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ☒ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than

- 8 and supervised.
- ☑ Keep the appliance and its cord out of reach of children less than 8 years.
 - ☑ Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
 - ☑ Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.
 - ☑ Do not allow the electric cables to touch the hot parts of the appliance.
 - ☑ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
 - ☑ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
 - ☑ **Warning:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
 - ☑ **Warning:** When the range hood and appliances supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar).

Safety

- ☒ Please dispose of the packing material carefully.
- ☒ Do not use flammable sprays in close vicinity to the appliance.
- ☒ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ☒ A steam cleaner is not to be used.
- ☒ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ☒ The appliance is for domestic use only.
- ☒ **Warning:** Consult local regulations regarding fumes outlets. Do not connect the hood to a fume, ventilation or hot air duct. Confirm that room ventilation is appropriate with the local authorities. Make sure the maximum air extraction flow rate for the appliances in the room does not exceed 4 Pa (4x10⁻⁵ bar). The room must have adequate ventilation if an extractor hood is used simultaneously with appliances that run on gas or other fuels. The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels. Regulations regarding air extraction must be complied with.
- ☒ **Warning:** Before connecting the hood: switch off the electricity supply and check that the supplied voltage and frequency coincide with that indicated on the appliance nameplate.
- ☒ **Warning:** The hood may stop working during an electrostatic discharge (e.g. lightning). This

involves no risk of damage. Switch off the electricity supply to the hood and reconnect after one minute.

- ☒ To avoid the risk of fire, clean the metal filter regularly and closely watch and regulate pans containing hot oil.
- ☒ Do not use the hood if it shows signs of damage or imperfection. Contact customer services.
- ☒ Flambe cooking must not be carried out underneath this appliance.
- ☒ When installing the appliance, make sure that the following distances between the top of cooker or hob and the lowest part of the cooker hood must be observed:
 - > Gas hobs: 750mm.
 - > Electric hobs: 650mm.
- ☒ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ☒ Regarding the information pertaining to installation, thanks to refer to the below paragraph of the manual.
- ☒ Regarding the information for replacing the bulb, please see section "Care and maintenance".

**Warning**


There is a risk of electric shock and fire if cleaning is not carried out in accordance with the instructions.

Before you start

Things to check before you start

- ☒ To avoid the constant danger when using electrical appliances, it is important to properly install this range hood and read the safety instructions carefully to avoid misuse and danger. We recommend that you keep this instruction manual for future reference and pass it on to any future owners. After unpacking the range hood, check that the range hood is intact. When in doubt, do not use the device.
- ☒ Check the package and make sure you have all of the parts listed.
- ☒ Decide on the appropriate location for your product.
- ☒ If this product contains glass please take care with fitting or handing to prevent personal injury or damage to the product.
- ☒ This specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- ☒ If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

You will need

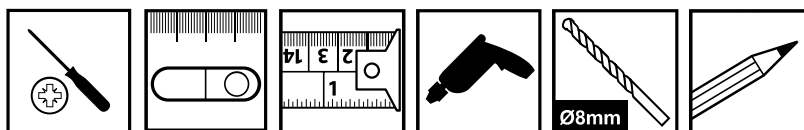


Accessories not supplied



**SELF ADHESIVE
ALUMINIUM TAPE**

Extraction

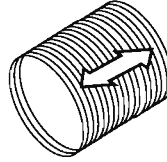

Ø150mm

Operation


Product functions

- This appliance extracts the air of the kitchen to remove the odours and keep an optimum level of air quality inside the room, it also allows you to illuminate the cooking area.

Switching on/off

- Switch on the appliance at the switched fused connection unit. The appliance is ready for use.

Touch control panel

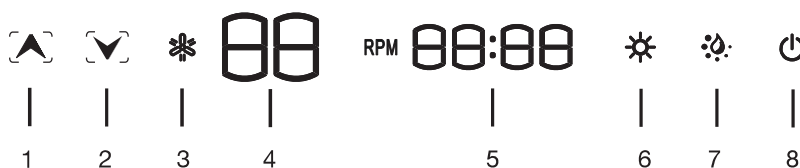

1. Gear up key: press the motor gear to move up one level
2. Gear down key: press the motor gear down one level
3. Booster key: Press the motor once to enter the booster mode and count down for 3 minutes. After the timing is over, the gear before switching to the booster is entered..
4. Gear display.
5. Time display.
6. Lighting key: press the switch
7. Self-cleaning: Press and hold for 2 seconds to enter the 11-minute countdown. The first 10 minutes are the heating state of the electric heater. The last 1 minute is the time when the motor is running. Long press for 2 seconds to close.
8. ON/OFF: Press 2 times for 90 seconds to close.

Intelligent control:

Within a distance of 8cm from the front of the control panel, waving from left to right can open Machine, at this time the motor and the lights are turned on, the motor remains in the memory of the last shutdown Gear. When waving from right to left, the motor and lights are turned off.


Note,

When waving the gesture range needs to cover the entire control panel.




Warning

Always switch off the electricity supply before carrying out maintenance work on the hood. In the event of a fault, contact customer services.

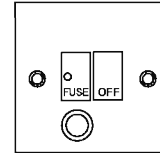


Active charcoal filter replacement

1

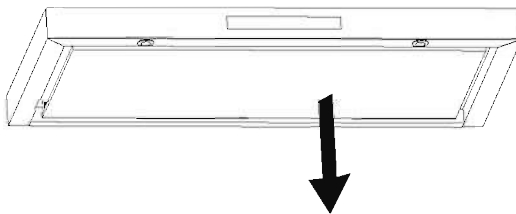


2

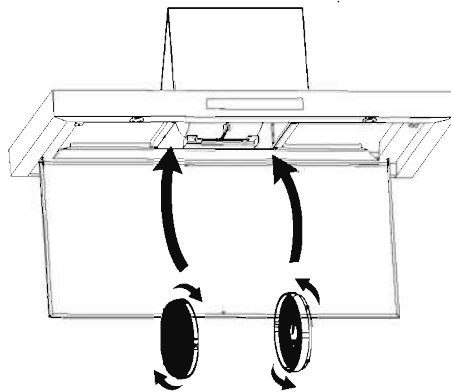

Care and maintenance


Aluminium and active charcoal filters replacement

Active charcoal filters:
Replace every 3 months.

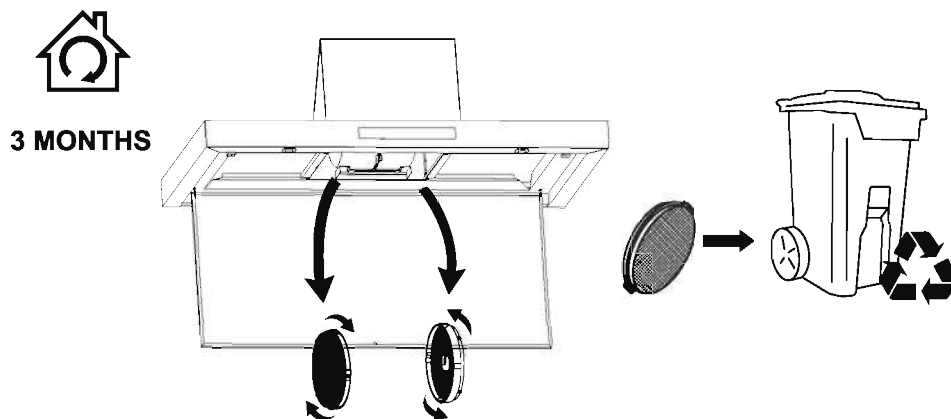


Oil Cup and active charcoal filters replacement

1.

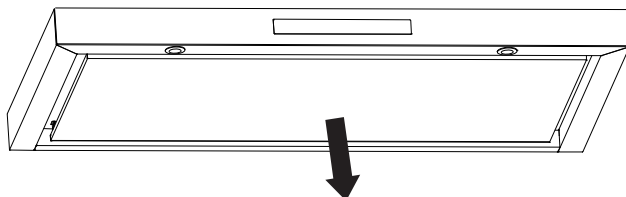

The bezel is pulled down

2.

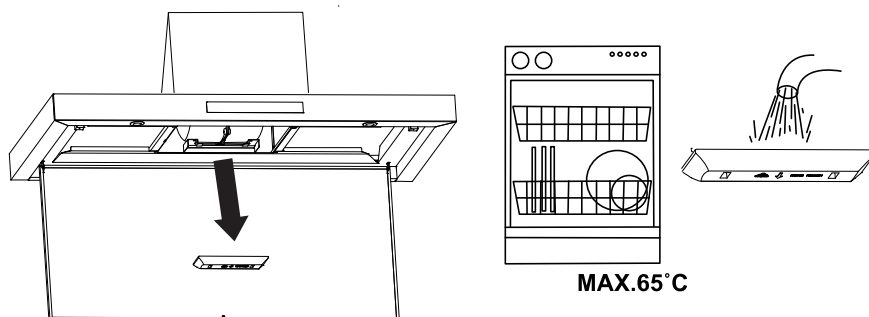

Pull the oil cup slightly outwards and remove the oil cup

Oil cup: To avoid fire, clean thoroughly every month or whenever the display light is on (if installed). To do this, remove the oil cup and soak it in hot water and detergent for an hour. If using a dishwasher, do not exceed 65 ° C



Note: Increase the filter cleaning/replacement frequency if the hood is used for more than 2 hours a day. Always use genuine filters from the manufacturer.

Troubleshooting

Troubleshooting

Fault	Cause	Solution
Excessive vibration.	The appliance is not installed properly on the brackets.	Take down the appliance and check it is properly fixed.
	The fan blade is damaged.	Switch off the appliance. Repair to be carried out by qualified service personnel only.
	The fan motor is not fixed tightly.	
Light on, but motor does not work.	The fan blade is jammed.	
	The motor is damaged.	
Both light and motor do not work.	Light bulb blown.	Replace with a bulb with correct rating.
	Power connection loose.	Check power supply.
Suction performance reduced.	Speed may be too low.	Select a higher speed.
	Distance between the cooker hood and the hob is too great.	Readjust the distance to: Gas hobs: 750mm Electric hobs: 650mm
	Aluminium grease filter is dirty.	Clean filters. See <i>Care and maintenance</i> section.
	Top vent might be obstructed.	Clear any obstruction.
	Optional vent kit might be twisted.	Ensure that the vent kit is fitted to the manufacturers instructions.
Works normally but cooking smells linger.	Charcoal filter not fitted in recirculation mode or charcoal filter is full of grease.	Fit charcoal filter if recirculating or change the filter. See <i>Care and maintenance</i> section.



NOTE

If the lamp is failed please contact the after-sales care.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.


On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical specification

Supply voltage	220-240V~ 50/60Hz
Power consumption - Fan	300W
Power consumption - Luminary	Max 2x1.5W
Power consumption - Total	303W
Protection class	I
Light bulb	Max.1.5W

Technical and legal information

Wiring

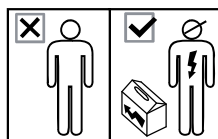


All installation work must be carried out by a competent person or qualified electrician.
Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate.



WARNING: THIS APPLIANCE MUST BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

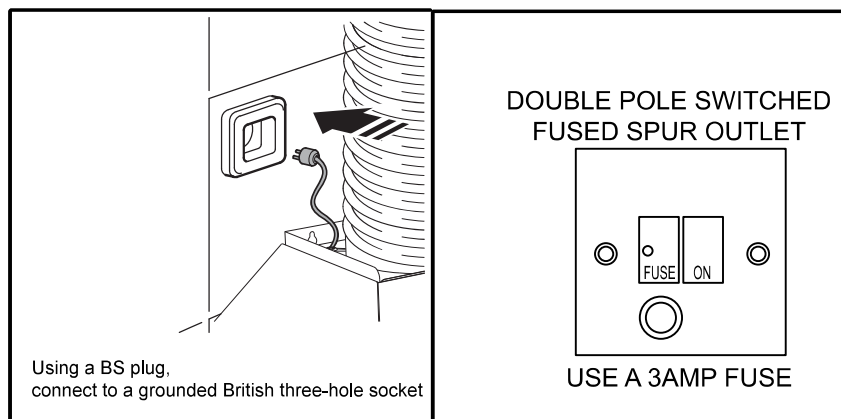

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Technical and legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Electrical Requirements

Electrical requirements Any permanent electrical installation must comply with the latest local legal requirements and local power company regulations. For safety, electrical installation should be performed by a qualified electrician or contractor.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.




WARNING: THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Installation

01

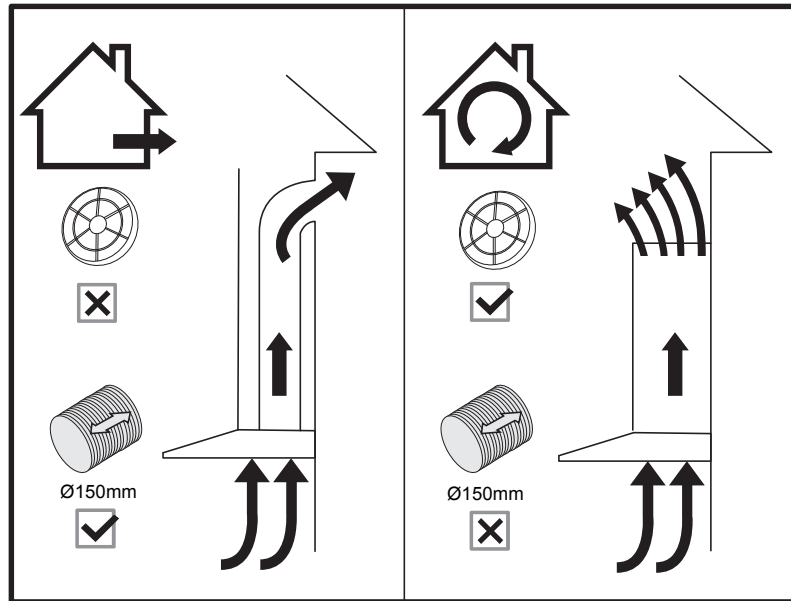



DUCTED OPTION

RECIRCULATION OPTION

You can choose two type of installation:
- Ducted option
- Recirculation option

☒ **Warning:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards

02

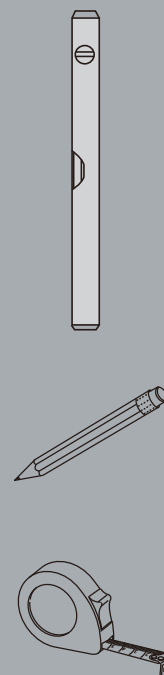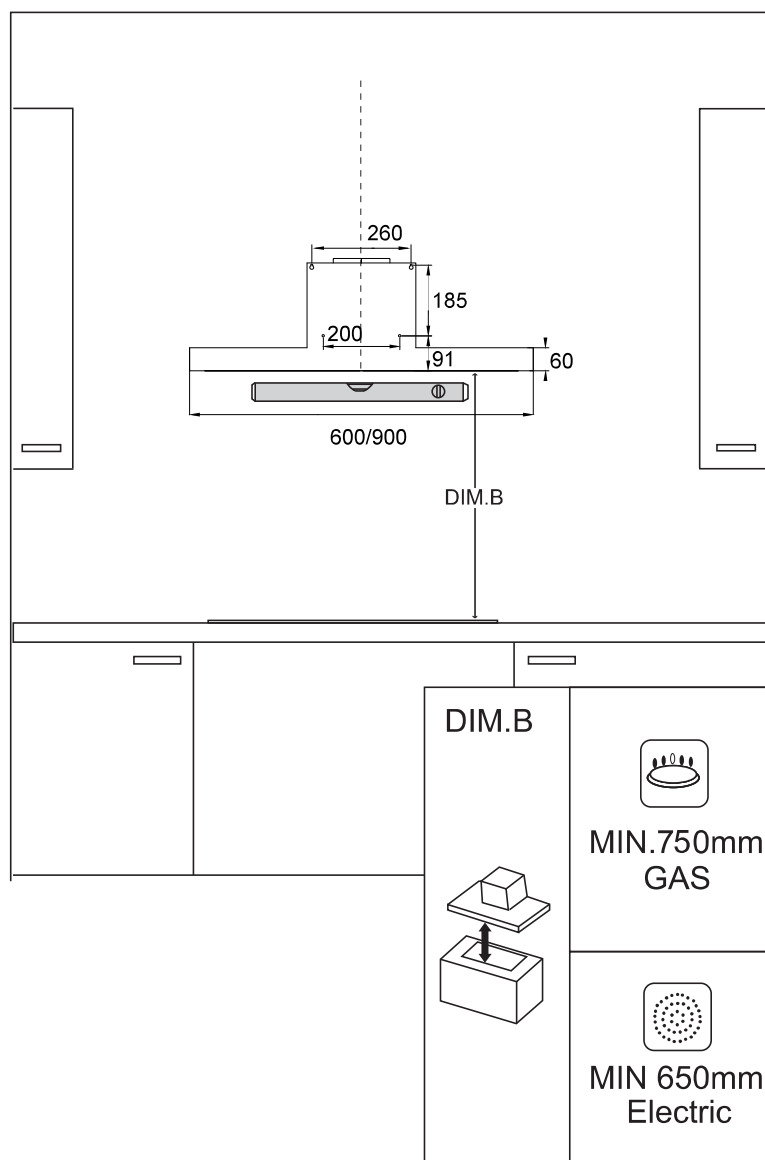

Mark on the wall the hole positions as shown in diagram.

 


The wall plugs supplied are suitable for solid walls only. When fixing to any other type of wall use suitable alternative fixings.


03



[03] x 4




[05] x 4

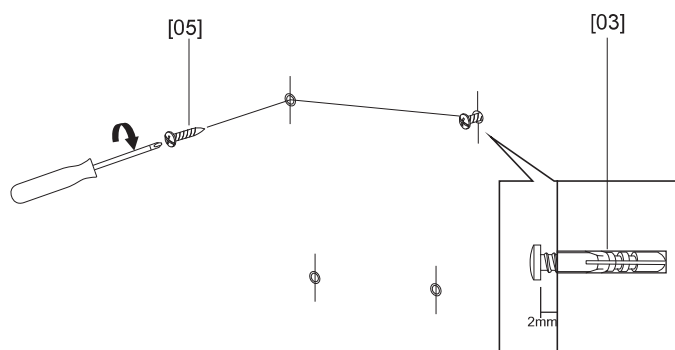


Drill the holes,insert the wall plugs in all 4 holes,then insert the lower four screws.


04

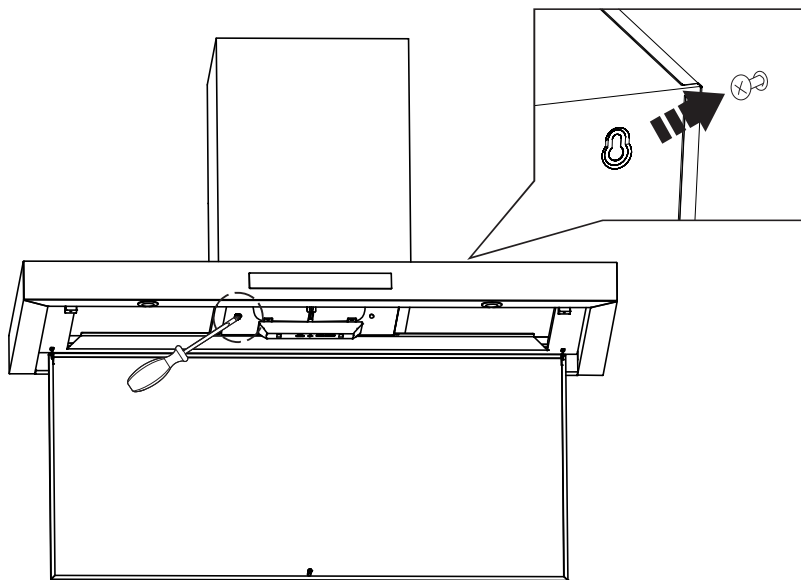

Position the hood over the lower four screws, then tighten them.

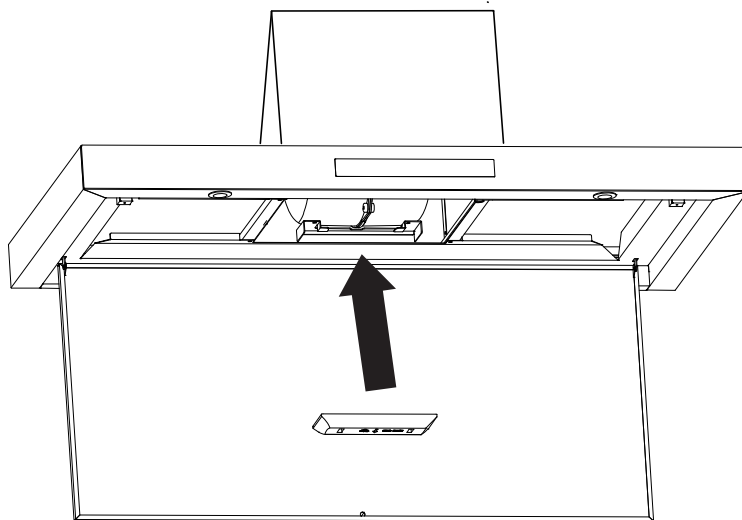


05

 


[04] x 1

Installation of the oil cup.

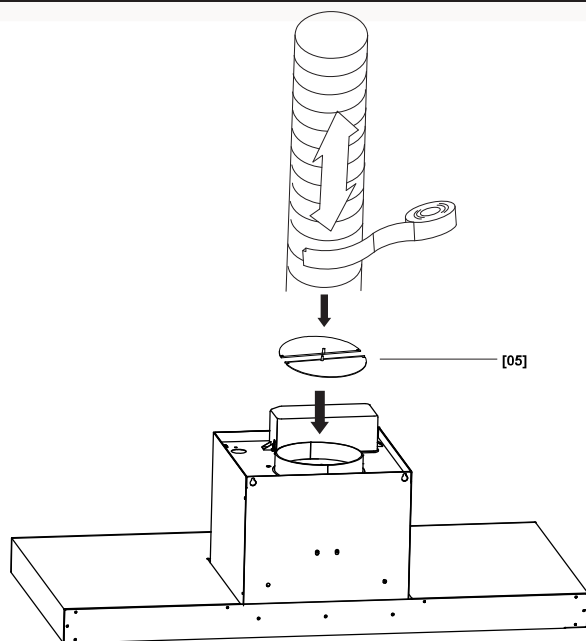

06

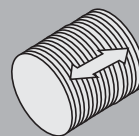


[05] x 2




Fix the Ducting Tube 150 using tape or clamp.

 07




[02] x 1

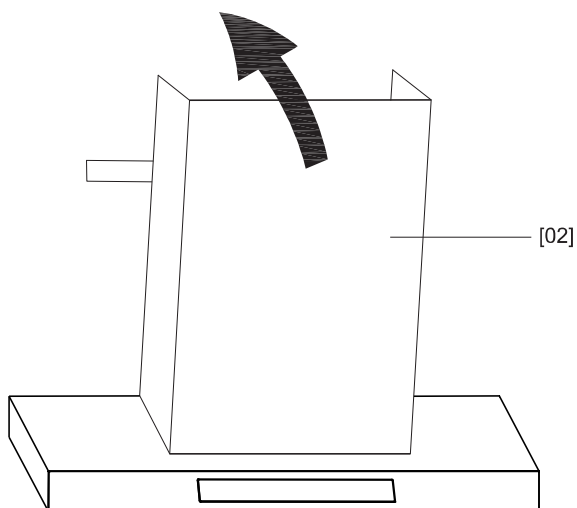

Fix to the wall the top bracket and place the decorative tubes.

08

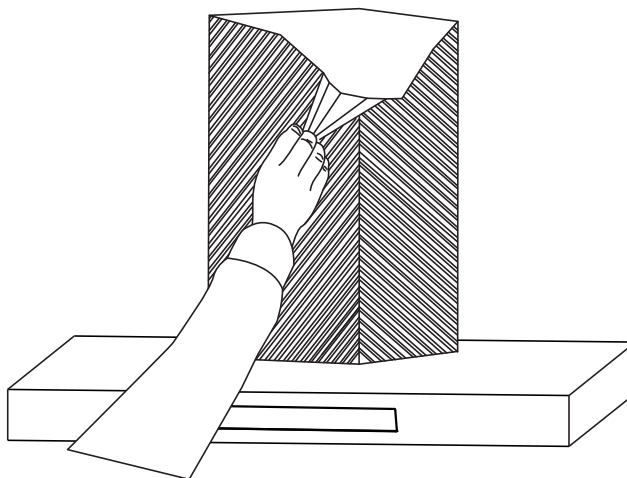

Remove the protective film.

For recirculating option refer to **Care and maintenance** section.

Note: For electrical connection see **Technical and legal information** section.

